


# Massage Chair User Manual

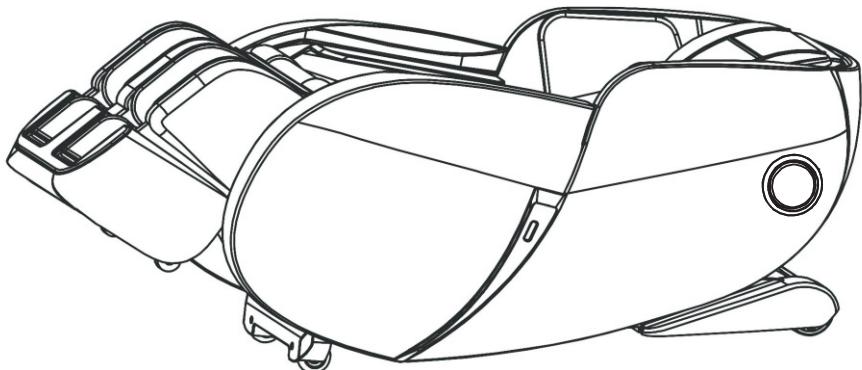

Massage Chair User Manual





---

## DELUXE MASSAGE CHAIR User Manual

---

Thanks you for purchasing our Massage Chair. Before operating the Massager, please read this User's Manual thoroughly for the correct methods of usage, especially the notes on Safety. This manual should be kept available for future reference after you have read it through.




### Contents

<b>Contents</b>	1
<b>Components</b>	2
<b>Remote Control Functions</b>	3
<b>How to Use the Remote Control</b>	4
<b>Description of LCD Monitor</b>	7
<b>Checkpoints before Use and Operational Procedure</b>	8
<b>How to use</b>	9
<b>How to move</b>	10
<b>Caution</b>	11
<b>Problems and Troubleshooting</b>	13


## Product characteristics



## Components

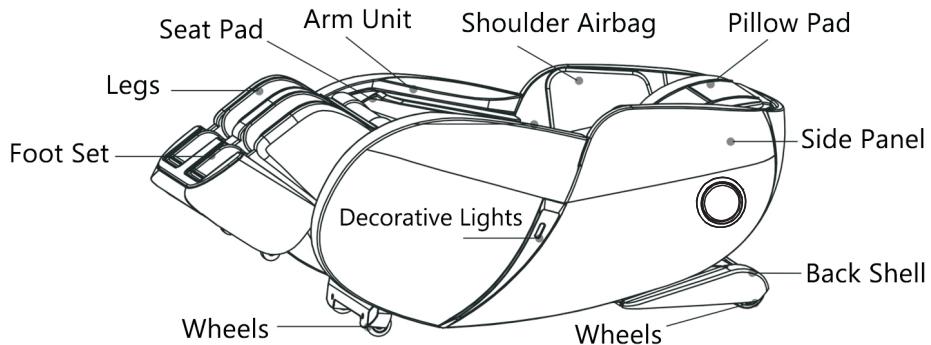

# Remote Control Functions

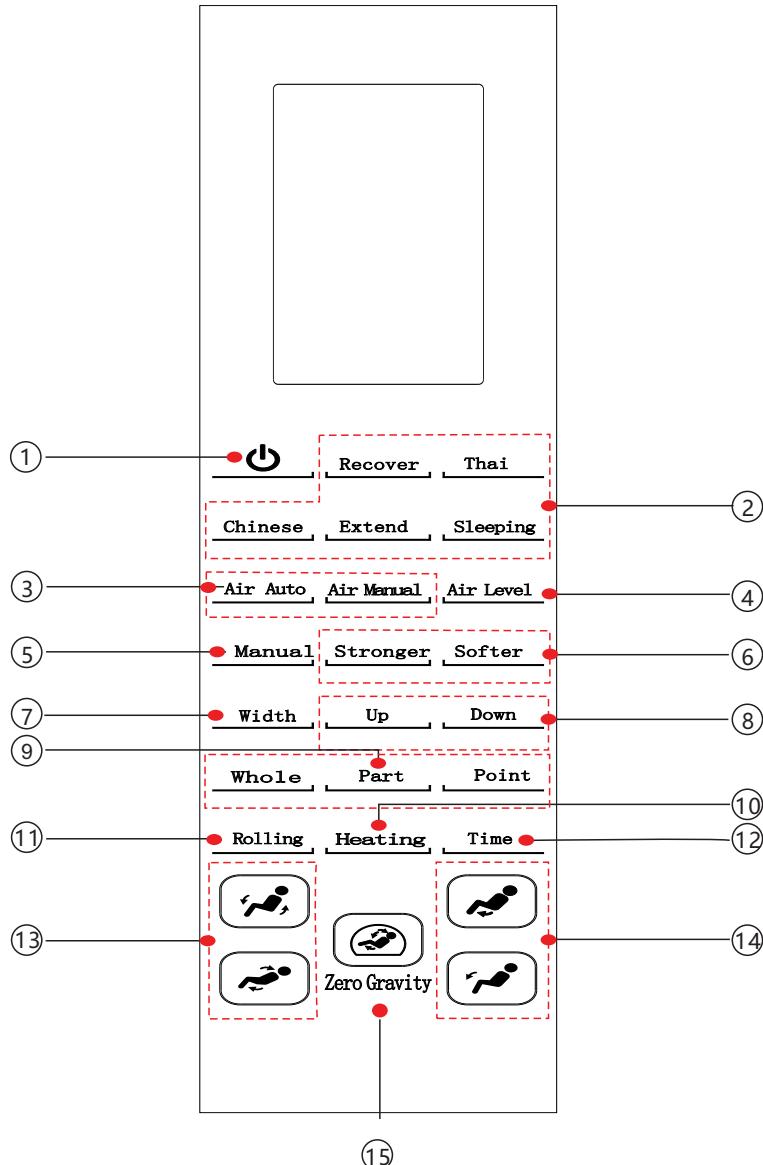

---

## How to Use the Remote Control

### ① Power

This button is used to on/off the Power

### ② Auto program

A	Recover
B	Thai
C	Chinese
D	Extend
E	Sleeping

### ③ Air pressure

User can turn on/off Auto Air pressure massage funtion which is given to Legs, Arms and Shouders.

#### Air manual

User can choose each section of Legs, Arms and Shoulders in this mode.

### ④ Air pressure Intensity control

This button is used to adjust Massage strength of Air pressure in 3Steps.

### ⑤ 5Back massage manual programs

1. Kneading massage
2. Tapping massage
3. Dual action
4. Knocking massage
5. Shiatsu

### ⑥ Back massage Intensity control

This mode is available in Manual program and it is adjusted in Massage Intensity

---

## ⑦ Width

This button is used to adjust the interval of between Massage ball left and right in Tapping, Shiatsu and Knocking mode.

---

## ⑧ Position control

This button is used to move the position of Massage ball during Manual program.

---

## ⑨ Massage section (whole / section / point)

This mode is available in Manual program and set to whole section on the Back part. Once the button is pressed, it is adjusted to whole/section/point part.

---

## ⑩ Heating

This button is used to turn on / off Heating. (waist)

---

## ⑪ Foot Roller/Rolling speed control

This button is used to turn on / off Foot roller.  
User can adjust Roller speed in 3 steps.

---

## ⑫ Time

Setting time is 15 minutes and working time can be adjusted from 5 minutes to 30 minutes.

---

## ⑬ Backrest control

 Backrest up: Press the button, back rest goes up, footrest goes down, release the button, stop.

 Backrest Down : Press the button, back rest goes Down, footrest goes up, release the button, stop.

---

## ⑭ Footrest control

 Footrest up : Press the button, footrest goes up, release the button, stop.

 Footrest Down : Press the button, footrest goes down, release the button, stop.

---

## ⑮ Zero Gravity


If button is pressed, Massage chair is moving to "Zero Gravity"position

---

## Bluetooth

This massage chair can connect with mobile phone to play music.

# LCD Monitor

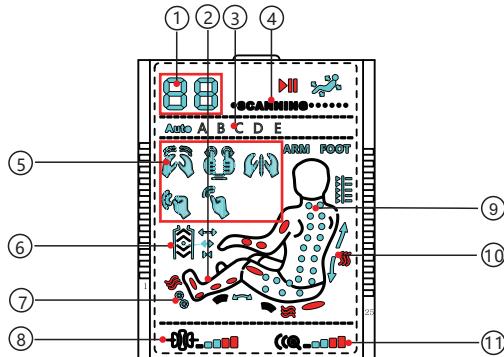


- ① Time (Default setting time is 15 minutes)
- ② Working on Air pressure position
- ③ Working on Auto program  
A: Recover B: Thai C: Chinese D: Extend E: Sleeping
- ④ Shoulder scan
- ⑤ Working on Back massage  
Kneading, tapping, knocking, dual action, shiatsu
- ⑥ Whole / section / point
- ⑦ Foot roller
- ⑧ Air pressure strength
- ⑨ Working on Massage ball position
- ⑩ Heating
- ⑪ Massage ball strength


## Checkpoints before Use and Operational Procedures

### Useful Tips

1. Do Not use the massage chair in a wet area.  
This may result in an electric shock or other accidents.
2. Place the massage chair on an even surface.
3. Keep the massage chair at least 5cm away from the wall at the back.
4. Keep out of direct sunlight or high temperatures.  
This may discolor or damage the leather.
5. It is recommended to place the massage chair on carpet to prevent the from being damage.

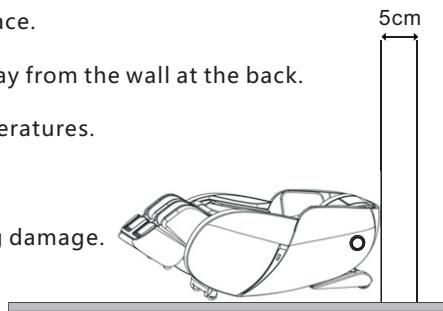


### Checkpoints before use

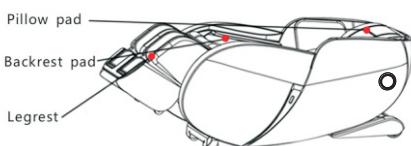

#### 1. Ensure the following massage chair conditions before use

- 1) Pillow pad are well positioned
- 2) Power connection
- 3) Place the massage chair on an even surface

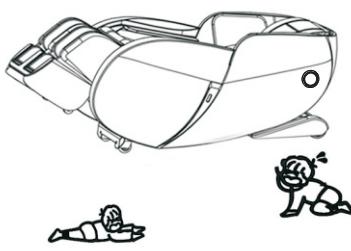

#### 2. Checking surrounding and clear any obstacles from around the massage chair

#### 3. Connect the supply


- 1) Connect the electric cord.
- 2) If [Power] is pressed in the back of the chair. the power lamp will blink

## How to use



### 1. Press [power]

Press the power button and select either automatic massage or manual massage option. the base time is set to '15minutes'.

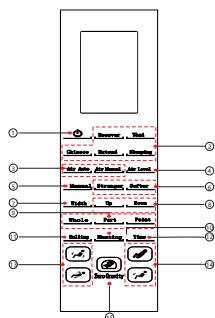

### 2. Use to remote control to select the desired massage program

#### ① Auto massage program

This program is recommend for those who want a simple massage.

#### ② Manual massage program

The user can choose a massage mode and target area.



### 3. Switch off the power to stop the operation

If [Power] is pressed to stop the massage, massage balls, backrest and footrest return to the original.


### 4. Check point after using

- 1) If not used the machine, press "OFF" button.
- 2) Turn off power switch and pull out plug
- 3) If not use the machine for a long time, please cover the machine using cloth because it is covered with dust and it is having any bad effects.

## How to move

Switch off the power and unplug the power cord.

The safety device up and roll the wheel, can be moved.

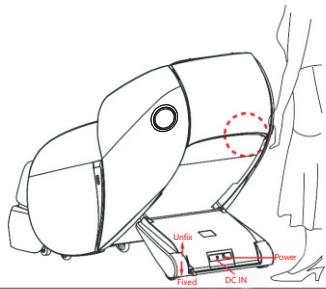

### Caution

Wind or fix the electric cord to a chair leg to prevent any damage during transportation. Because parts can be broken by external impact, be careful when placing the massage chair onto the ground. Use the machine on an even surface only. If the machine is moved on a wooden floor using the wheels, the floor could be damaged.

## Safety Precautions

- ※ Make sure that you read the manual and follow the instructions before use.
- ※ We shall NOT be responsible for any results caused by the violation of these regulations.
- ※ The safety instructions are divided into Warning and Caution as follows.

	<b>Warning</b>	Improper operation may threaten user safety.
	<b>Caution</b>	Improper operation may harm the user or the machine.
	<b>Use prohibited</b>	 <b>Disassembly prohibited</b>  <b>Follow the instructions</b>  <b>Definite power supply control</b>

### Warning



Check if there are any obstacles or children near when adjusting backrest and footrest angles before operation



- Check the panel buttons and power switch before operation.
- Do NOT allow children to climb the machine.
- Be careful not to allow the electric cord to become entangled or be pressed by a heavy object.
- Use only the rated voltage to avoid fire or failure.  
Plug the power supply into a grounded outlet only.
- Do NOT pull on or peel the sheath off of the electric cord.  
This may result in fire or electric shock.



- NEVER randomly disassemble or remodel the machine. We shall NOT be responsible for any results caused by the violation of this regulation.
- If damage to the electric cord is suspected, contact us or the distributor for repair.



## Caution



- Keep the machine stable on an even surface at all times before use.
- Check if the massage balls inside the backrest pad are well arranged before use.
- The optimum massage time is 20 minutes. The massage time for the same body part should NOT exceed 5 minutes.
- If operated repeatedly, leave the machine idle for about 20 minutes before reuse.
- Make sure that the power is off after use.
- Keep the machine away from wet or dusty areas. Failure to do so may result in a short circuit or mechanical failure.
- Do NOT use the system in high temperatures.
- Do NOT use the machine with a heater near, and keep out of direct sunlight to prevent fire.
- Do NOT use the system in a humid place. (ex: Bathroom, etc.)  
(If the massage chair is used in a cold area, do NOT greatly increase indoor temperature all at once. If the machine is relocated from a warm to a cold place, it may not operate normally. In this case, leave the massage chair powered off for about one hour.)
- Check if there is any damage or defect to the machine before use. If any problem is detected, stop the machine immediately and contact us or the distributor.

- If the machine is not used for a long period of time, contact a professional to find out if there are any defects in the product.
- Children and the elderly should use the machine only in the presence of an assistant.
- Do NOT use the massage chair if you fall under one of the following categories (including children):
  - Suffering from a physical or mental problem; lack of experience or knowledge If individuals having these issues want to use the massage chair, use should take place only with an assistant present.
  - Suffering from spinal disease or having weak bones; Using an orthotic, prosthetic or any other form of assistive device
- Those in one of the following categories are also strictly prohibited from using the massage chair:
  - With an adjunctive device transplanted in the body
  - Using a critical medical device such as an artificial heart/lung
  - Using a controlled heart device such as an artificial heart
- Do NOT use the massage chair simultaneously with other medical equipment. This may result in poor efficiency or bodily injury.
- If you fall under one of the following categories, consult with your doctor before use:
  - Cancer patient; suffering from a heart problem or any other physical or mental problems
  - Mental illness
  - Under medical treatment
  - Pregnant or menstruating woman
  - Suffering from a chronic disease or serious illness
  - Scars
- Do NOT use the massage function for prolonged periods.
- Do NOT apply too much force to the rollers.
- Be careful to not get your hand or foot stuck in the machine.
- Do NOT put heavy objects on the backrest, armrest or footrest. Do NOT sit on the massage chair in an awkward position.
- NEVER move the machine during use.
- Do NOT use the machine right after a meal.
- Do NOT fall asleep during use.
- Do NOT use the machine after you consume alcohol. This may result in bodily injury.
- Keep the electric cord away from water or dust.
- If your body or hand is wet, do NOT operate the machine
- Do NOT put your hand or foot on the remote control.  
This may cause improper operation.
- To prevent fire, do NOT use an electric pad or blanket with this device.
- Do NOT use the massage chair with other electrical devices.
- Be careful to not get any body parts or objects stuck in the machine.  
This may result in bodily injury.
- Check if there are any sharp objects (ex: Car keys, etc.) in your pocket before use.



## Problems and troubleshooting

Problems	Checkpoints	Troublhooting
'Standby Mode' out of order	Power supuy	Switch on the power
	If a massage option is selected	Select a massage option
	Check on power receptacle	Check the power connection
Minor noise	Air pump, motor and other mechanical parts	Normal State
	Noise	
Roller height imbalance(left and right)	Alternative operation	Normal State
Sudden increase in noise during operation	Alternative operation	Turn off the power After
Massage function out of order	Length of use	Approximately 30minutes laters,
The backrest not returning back to the original position	Overload	Start the machine again
Power switch out of order	Plug	Plug adjustment

## Specification

Product	Massage chair	Rated Voltage	DC24V
Model	A8	Power Consumption	96W
Cover Material	Artificial Leather etc.	Recommended Time Duration	15minute
Size	144*74*63cm	Weight	68/79 KG
Standard	GB4706.10-2008	GB4706.1-2005	